


# How to Upgrade Your 340 Software

**FOTRIC .Inc**

Please follow the procedures as below:



**Step1:** Turn on the thermal imager, and connect the Thermal imager to the computer with Type-C to USB cable; or plug the imager's SD card into the computer.

**Step2:** Copy the newest updated software package to the SD card's main folder- update folder. As shown below:

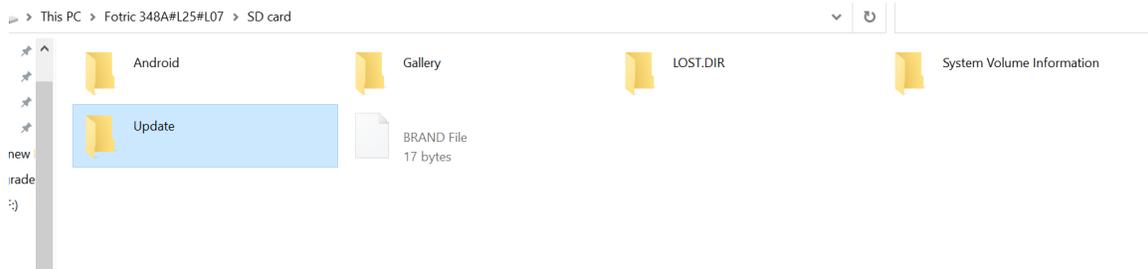

**Step3:**

Tap on the thermal imager's screen, open 'system menu'-  
"Settings"- "Device Set" – "About" – " System upgrade"

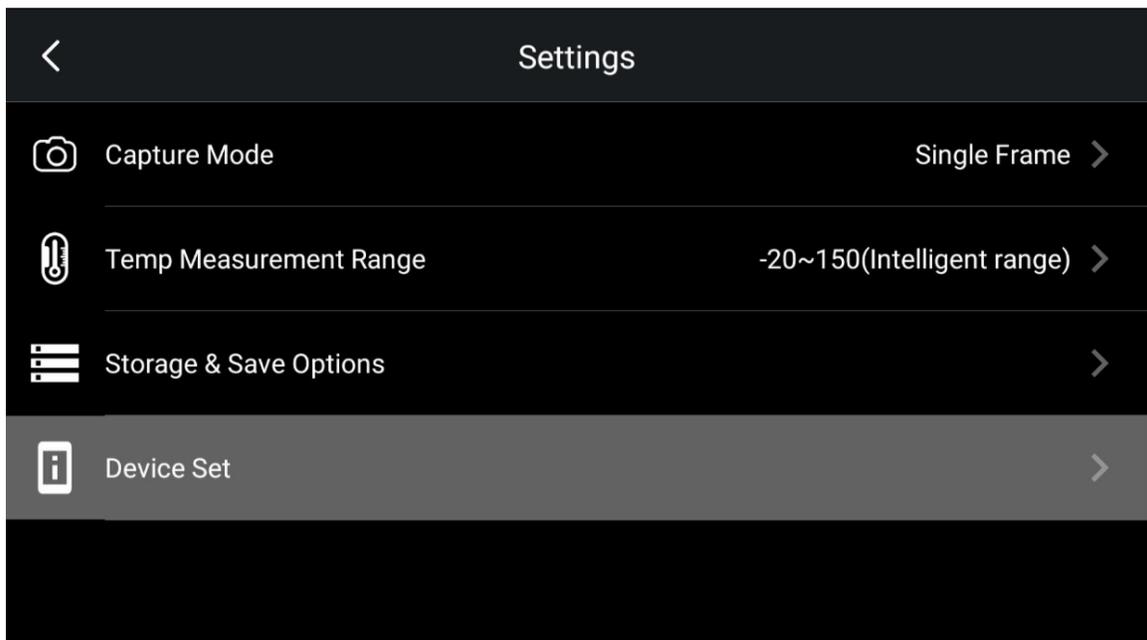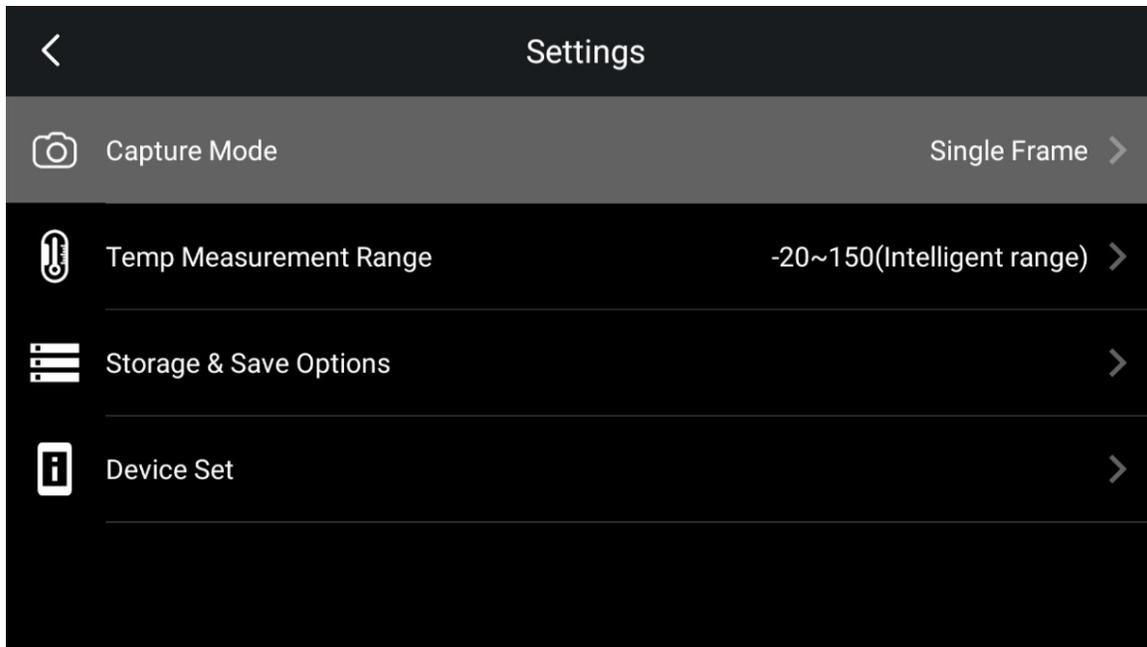

< Device Set

Screen Off Never >

Manual Mode Max/Min >

Volume 73% >

Reset >

i About >

< About

Remaining SD Card Capacity 28.77GB

Optical compensation >



CVT

Status Information >

System Upgrade...



## Step 4

Click “System upgrade”- “ SD update”

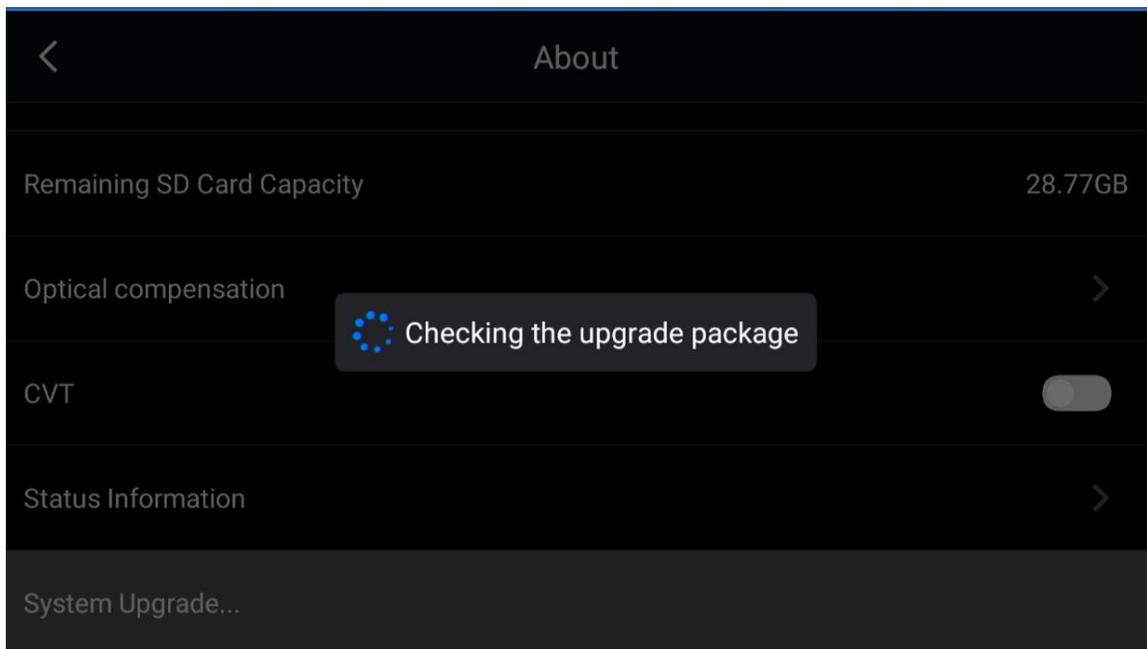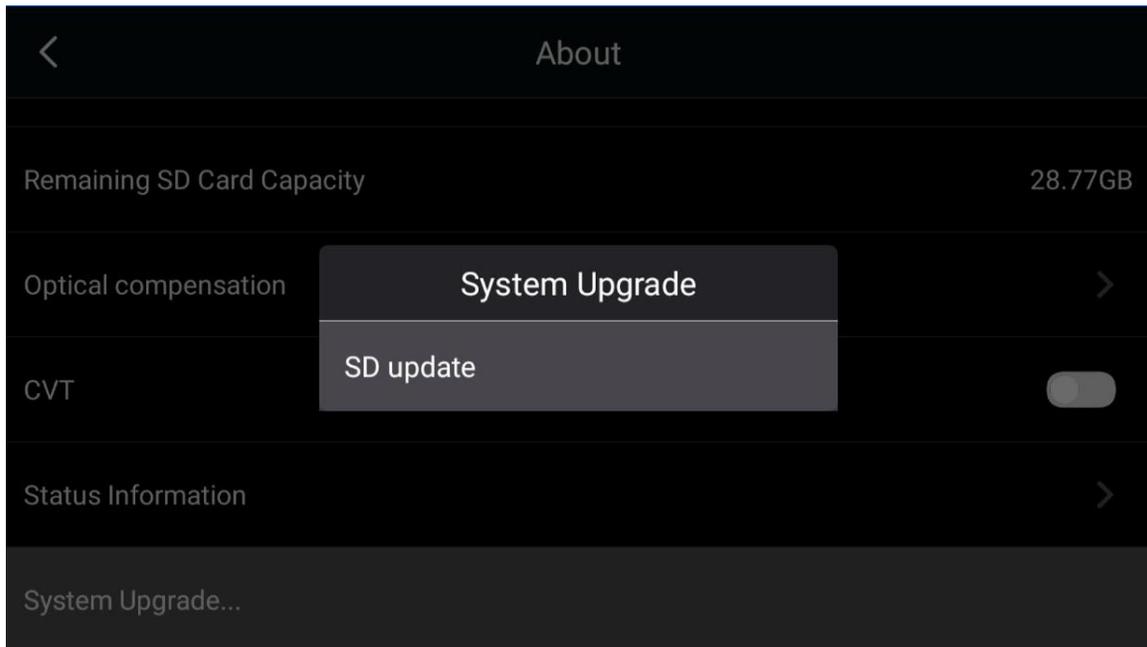

Step 5:


Click the blue button “update” to update to the newer software version.

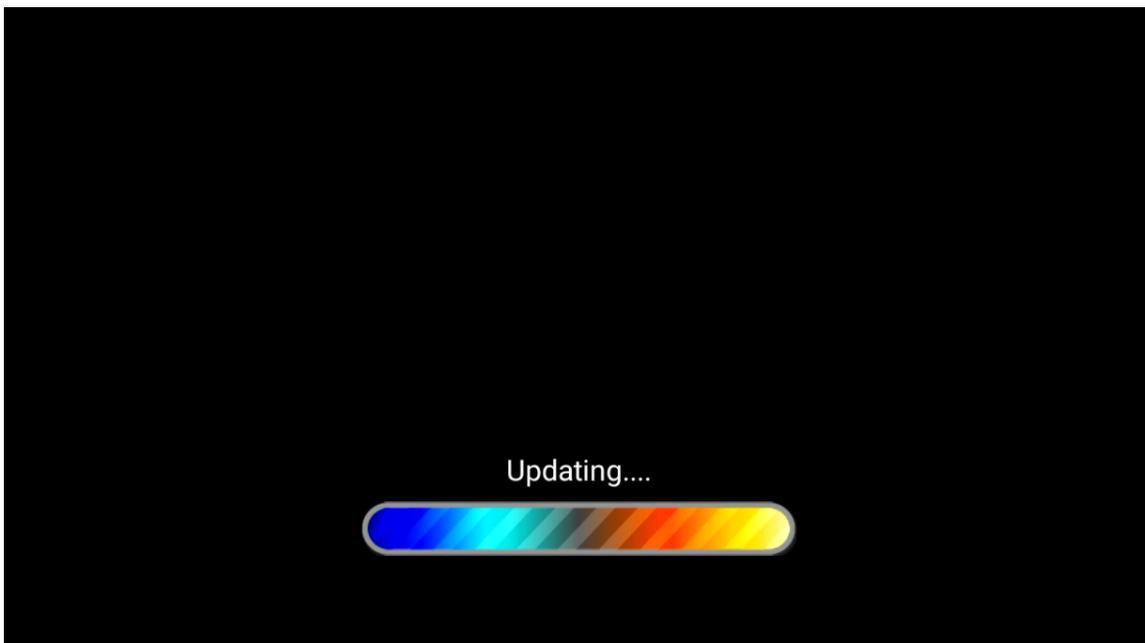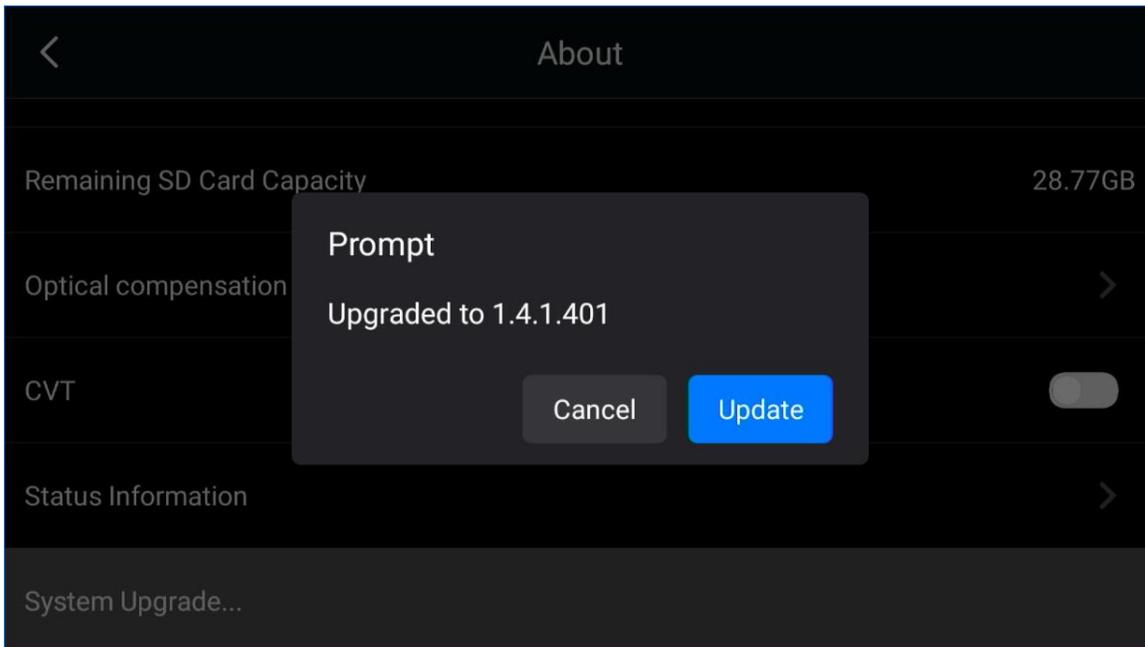

## Step 6:

After the software update is completed, you can check the software version from the "About" – "software version".

Do not forget to check if the thermal imager is functional well, and its connection with AnalyzIR software. In some cases, AnalyzIR software must be upgraded to newest version so that it can work with the device.

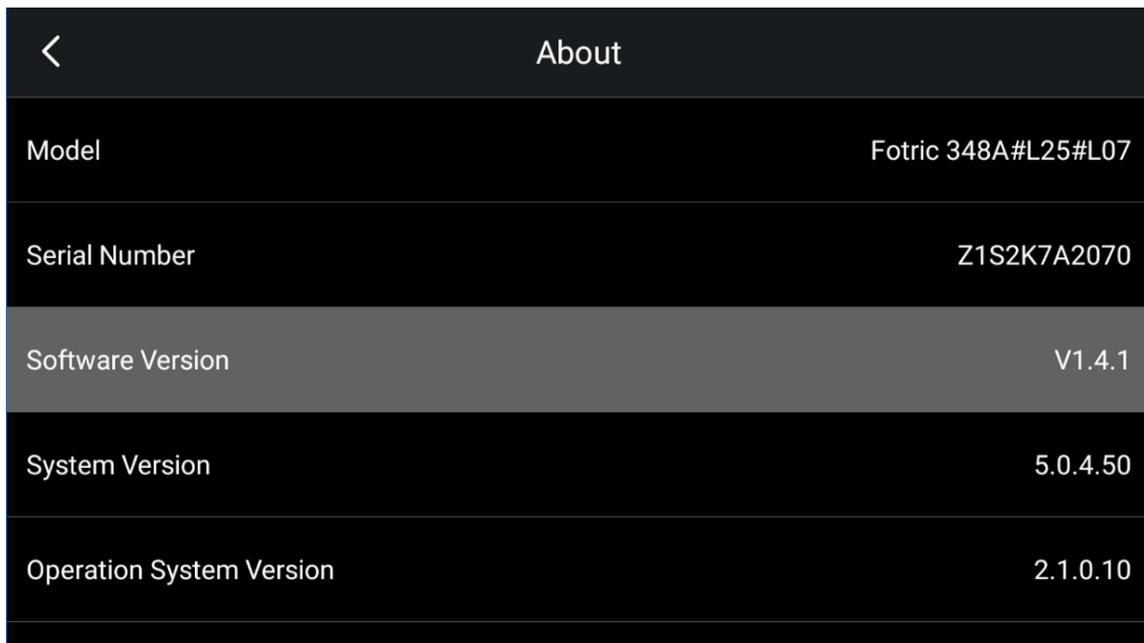

About	
Model	Fotric 348A#L25#L07
Serial Number	Z1S2K7A2070
Software Version	V1.4.1
System Version	5.0.4.50
Operation System Version	2.1.0.10